



coway AIRMEGA

Coway Air Purifier AP-1220B

This product is for domestic use only. It cannot be used in overseas countries where the power voltage is different.
Warranty card is included in this user's manual.
Read and save these instructions.
English/German/French/Spanish/Italian/Swedish/Polish

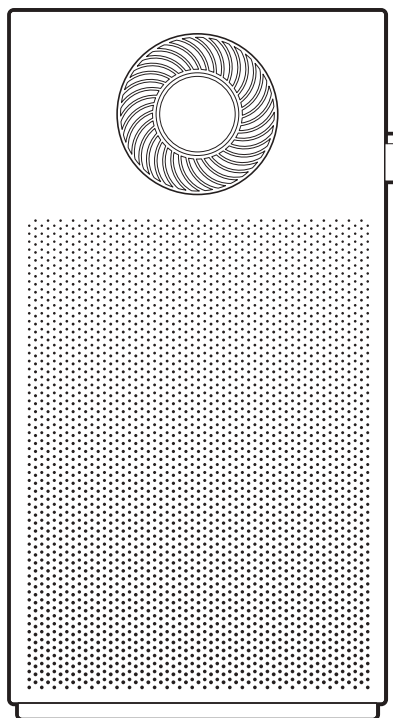


 This paper can be recycled.

FEATURES


- 1 Superior Air Cleaning**
In order to remove fine dust in the indoor air, the product uses a powerful ultra-fine dust collecting filter and optimized filter system to remove contaminants quickly.




- 2 Power Circulation of Clean Air**
The normal circulation and focus circulation functions circulate clean air rapidly in a variety of directions. With the flow path switching structure applied, the UI control is designed to be intuitive.

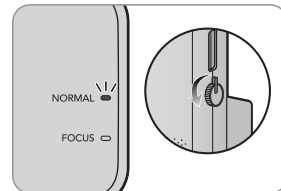


- 3 Customizable High-performance Filter System**
The customized filter system provides right filters for various situations, seasons, spaces.

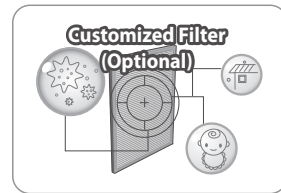

- 4 Real-time Air Cleanliness Display**
The pollution sensor allows you to check the indoor air condition easily from a distance through the four-level color display.

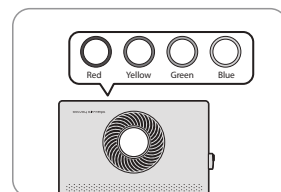

- 5 Detachable Vent Grille**
The vent grille at the top of the product and the built-in front grille can be separated to make cleaning easier than other products.

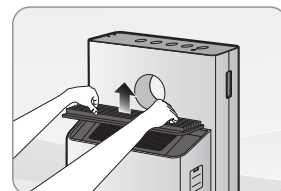

DEAR CUSTOMERS

Thank you for using the **Coway air purifier**.
Please be sure to read this user manual to use and maintain your air purifier correctly.
If you experience any problems during use, you can refer to this user manual to resolve them.
This user manual contains the product warranty, so please store it safely.

CONTENTS

FOR INFORMATION

- | 03 | SAFETY INFORMATION
 - Danger
 - Warning
 - Caution
- | 07 | PARTS NAME
- | 09 | AIR PURIFICATION PROCESS

HOW TO USE

- | 10 | BEFORE USE
 - How to Install Filter
- | 11 | INDICATORS AND BUTTONS
- | 13 | HOW TO USE
- | 15 | FORCED FILTER RESET MODE
- | 16 | ADJUST PARTICLE SENSOR

MAINTENANCE

- | 17 | HOW TO CLEAN
 - Product
 - Filter
- | 19 | HOW TO REPLACE FILTER

OTHERS


- | 21 | TROUBLE SHOOTING
- | 22 | SPECIFICATION
- | 23 | WARRANTY CARD

- Please keep the user manual in easily accessible areas. -

SAFETY INFORMATION

The following information is for user safety that should be observed.

It is to ensure user safety and prevent property damage. Please read the precautions carefully and use the product correctly.

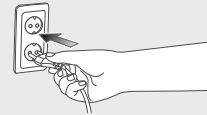

220 V – 240 V~ 50 Hz, 60 Hz only

⚠ DANGER : Failing to follow the precautions below may result in serious injury or even death.

- Do not use damaged power plugs or loose sockets.
- The power plug must be plugged into 220 V – 240 V~ 50 Hz, 60 Hz.
- Do not pull on the power cord to move the device.
- Do not touch the power plug with wet hands.
- To avoid damaging or warping the power cord, do not use excessive force to bend the power cord or put heavy objects on top of it.
- Do not repeatedly connect and disconnect the power plug.
- If water enters the power supply, unplug the power and completely dry before using again.
- Be sure to unplug the power during product repair, maintenance or part replacement.
- If the power plug's pins or contact area become covered in dust or water, wipe them thoroughly.
- Do not plug several electric appliances into one socket, and use only a dedicated socket.
- Unplug the power when not used for a long time.
- Do not carelessly connect or tamper with the power cord.
- If the power cord is damaged, do not replace it yourself. Contact a service center to have it replaced.
- Do not install near electric heaters.
- Do not put on top of electric products like heaters or televisions.

-
- Do not install in places with a lot of humidity or dust or places where water (rainwater) splashes.
 - Do not use or store combustible gases or flammable materials near this product.
 - If there is a strange sound, burning smell, or smoke from the device, immediately unplug the power plug and contact a service center.
 - Never immerse the product in water.
 - Do not spray flammable materials such as insecticides or air fresheners on the intake.
 - Do not open, repair, or modify the device yourself.
 - Do not put bowls of water, chemicals, food, small metal objects, or flammable materials on top of this product.
 - Unplug the power before cleaning.
 - If the purifier falls over and gets wet during use, A/S maintenance is required before further use.
 - Do not spray water directly on the device or use benzene, thinners, etc. to wipe it during cleaning.
 - Do not insert sharp objects such as picks into the air quality sensor.
 - Do not put fingers or foreign matter (pins, sticks, coins, etc.) into the vent.
 - Do not let children hang from or climb on the purifier.
 - Be careful that children do not put their hands in the vent.
 - Replace the filter with a new one when the time comes.
 - Do not spray water directly on the purifier.

SAFETY INFORMATION

⚠ WARNING : Failing to follow the precautions below may result in considerable physical injury or property damage.

- Do not unplug by pulling on the power cord.
- Plug into a power socket connected to an earth leakage circuit breaker (current sensitivity 30 mA or less).
- If extending the power cord, only use with sockets and cords of 250V/15A and use by itself.
- Do not use in baths, showers, swimming pools, or other areas where the purifier may be in direct contact with water.

⚠ CAUTION : Failing to follow the precautions below may result in slight physical injury or property damage.


- Do not unplug the power or move the purifier while it is operating.
- If unusual sound, odor, or smoke comes from the purifier, immediately unplug the power and call our service center.
- Do not install on a slope.
- Do not excessively impact or use excessive force on this product.
- Use at least 20 cm away from walls or other objects on each side.
- Install the purifier in a place where it is not blocked on any side so air can circulate well.
- Install at least 2 m away from TVs and other electronic items.
- Do not use in BBQ or other restaurants where odor, smoke, or oil may occur.
- Do not use in direct sunlight.
- Do not install in a high place.
- Do not use extreme force on the purifier.

-
- Do not push or lean on the purifier. The purifier may fall over.
 - Do not use for a long time in places that are sealed or where children, the elderly, or sick people are.
 - Do not block the vent with laundry or curtains.
 - Remove dust from the pre-filter with a vacuum cleaner or water.
 - Periodically wash the pre-filter and dry it well in a shady place with good ventilation.
 - People with physical, sensory, or mental impairment as well as children must be supervised or guided while using the device.
 - Children shall not play with the appliance.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
 - Cleaning and user maintenance shall not be made by children without supervision.
 - Children should be supervised to ensure that they do not play with the appliance.


READ AND SAVE THESE INSTRUCTIONS

PARTS NAME

Front/Rear

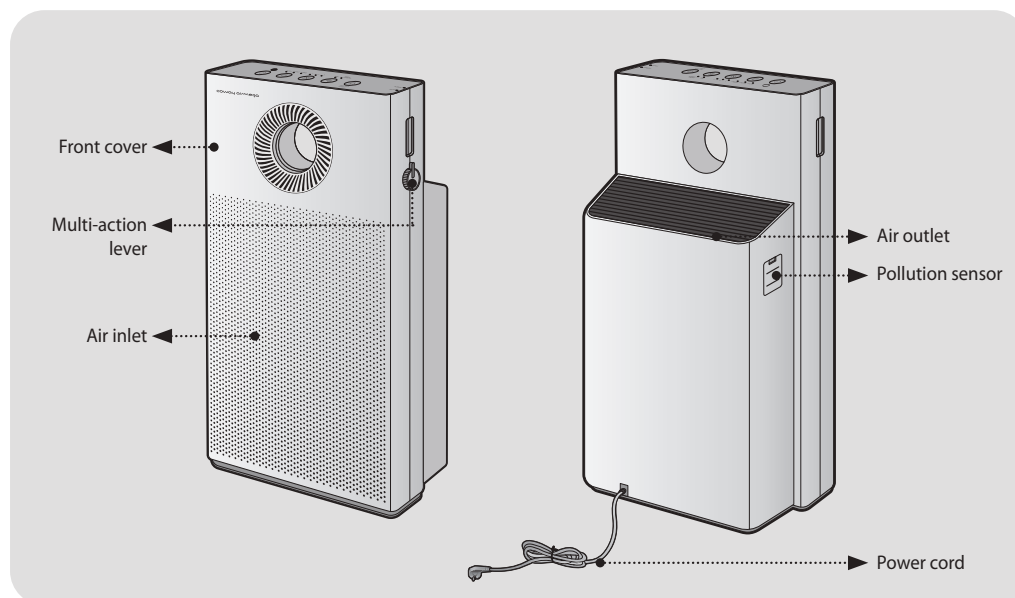

Top

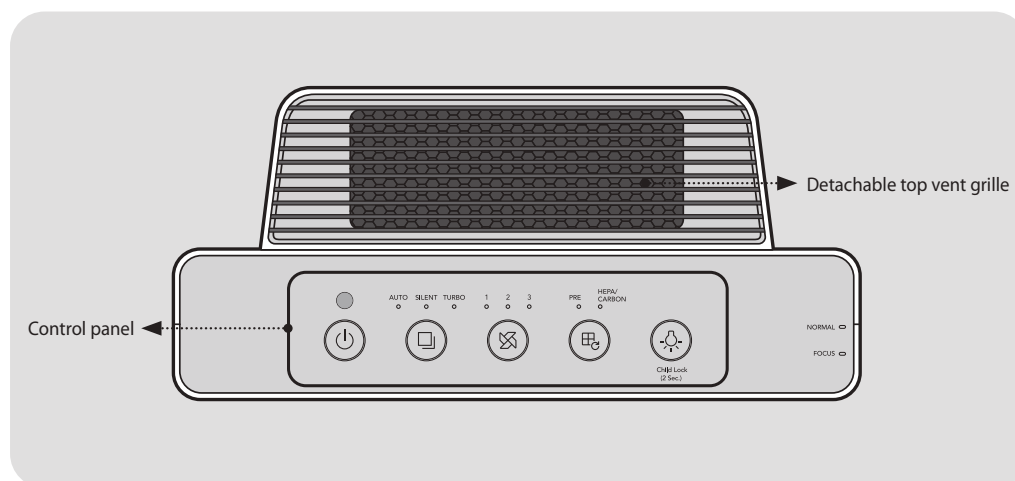

Accessories



User Manual

AIR PURIFICATION PROCESS

■ Pre-filter

Removes large dust particles, mold, hair, and pet hair.

■ Customized filter(Optional)*

The Customized filter(Optional) system provides right filters for various situations, seasons, spaces.


■ Deodorization filter

The granular activated carbon deodorizing filter effectively removes odors including food smells and unpleasant household odors and harmful gases.

■ GreenHEPA™ filter

High performance GreenHEPA™ filter has been applied for superior performance in removing fine dust and cigarette smoke.

* Coway GreenHEPA™ filter are treated with preservatives(Silver sodium hydrogen zinc phosphate and thiabendazole) to protect the filter from the growth of mold and bacteria and prolong filter life.

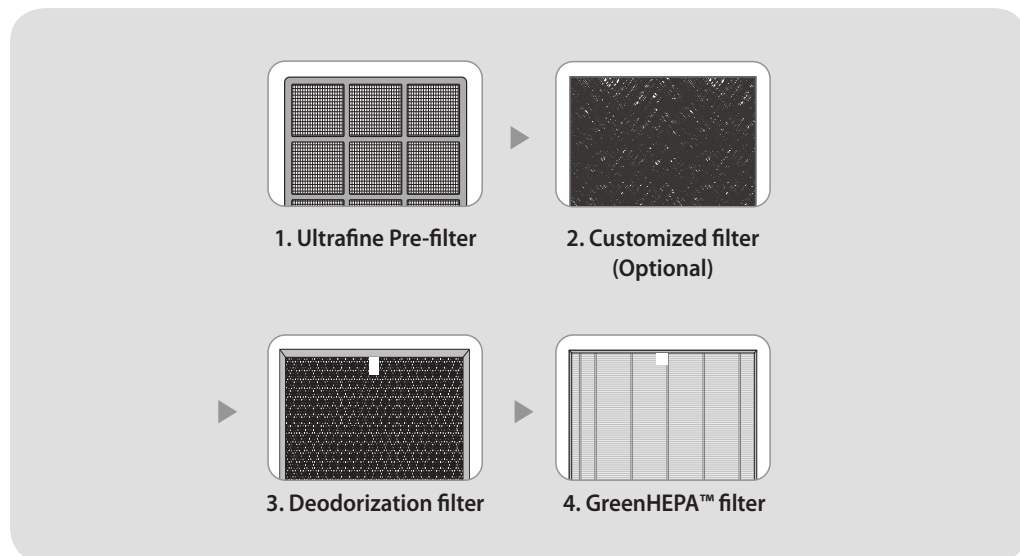

* The Customized filter(Optional) is sold separately and is not included with the product purchase.

* Absence of Customized filter(Optional) does not affect the operation or basic performance of the product.

BEFORE USE

Please check before use!

⚠ This product is for 220 V- 240 V~ 50 Hz, 60 Hz only.

Make sure to connect the power plug to a 220 V- 240 V~ 50 Hz, 60 Hz outlet.



How to Install Filter




Tips

- Be sure to remove the packaging vinyl before installing the filter.
 - Use the filter indoors only.
 - Unplug the power cord from the outlet when not using the product.
 - Check the front of the filter when installing it.
- ▶ Filter assembly order : GreenHEPA™ filter → Deodorization filter → Customized filter(Optional) → Ultrafine Pre-filter

1. Open the front cover.

Pull both sides of the front cover to open it.


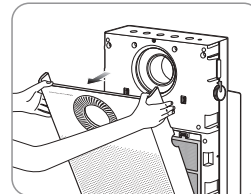


2. Take out the filter and remove the packaging vinyl.

Remove the packaging vinyl of the filters except the ultrafine Pre-filter and install them onto the product according to the filter installation order.

Insert the Customized filter(Optional) into the back of the ultrafine Pre-filter.



- * Filter installation order : GreenHEPA™ filter → Deodorization filter → Customized filter(Optional) → Ultrafine Pre-filter
- * The Customized filter(Optional) is sold separately and is not included with the product purchase.

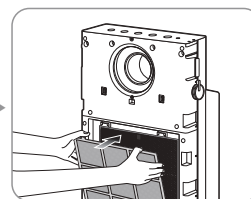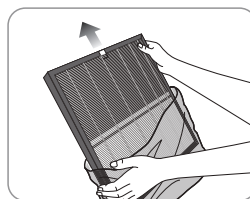

3. Attach the front cover.


Align the two projections on the bottom of the front cover with the grooves and push in the cover to fix it.

- * The product will not operate if the front cover is not attached correctly.

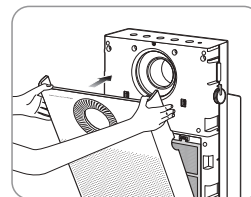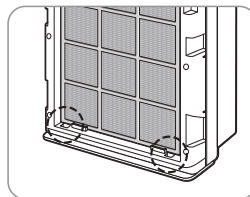

INDICATORS AND BUTTONS

Indicators

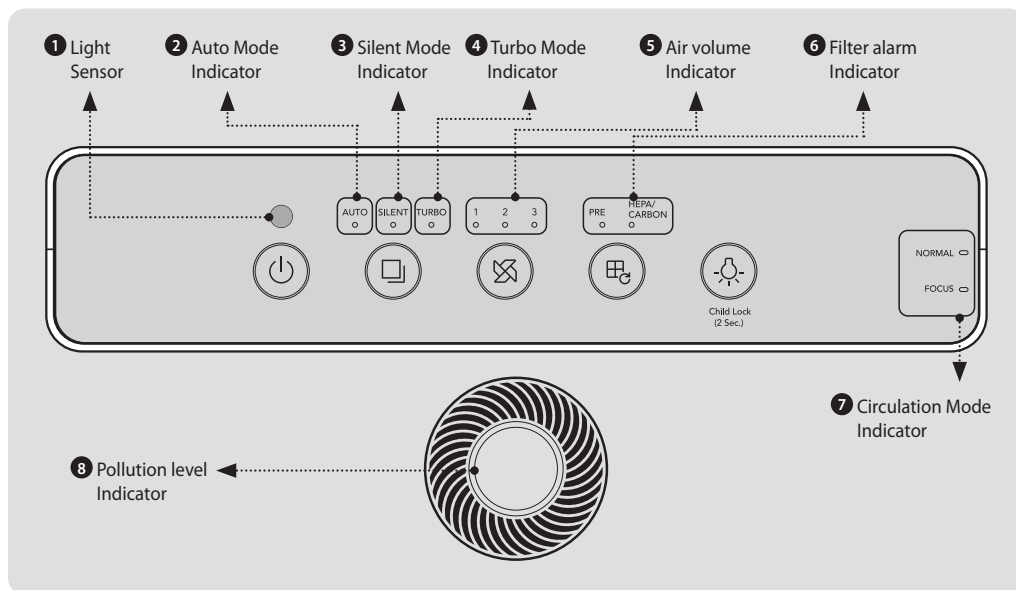

1 Light Sensor
This sensor detects light around the product.



3 Silent Mode Indicator
The indicator lights up when Silent Mode is selected.



5 Air volume Indicator
The indicator lights up when an air volume is selected.




7 Circulation Mode Indicator
The indicator lights up when Circulation Mode is selected. (NORMAL / FOCUS)



2 Auto Mode Indicator
The indicator lights up when Auto Mode is selected.



4 Turbo Mode Indicator
The indicator lights up when Turbo Mode is selected.

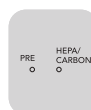


6 Filter alarm Indicator
The indicator lights up during the filter cleaning/replacement period. When there is 5% or less remaining in the filter cleaning cycle or life, this indicator lights up to alert the user.



8 Pollution level Indicator
This indicator displays the indoor pollution level in LED colors. Clean (blue) – Low pollution (green) – Medium pollution (yellow) – High pollution (red)

Pollution Level	Clean	Low pollution	Medium pollution	High pollution
LED Color	Blue	Green	Yellow	Red

Buttons

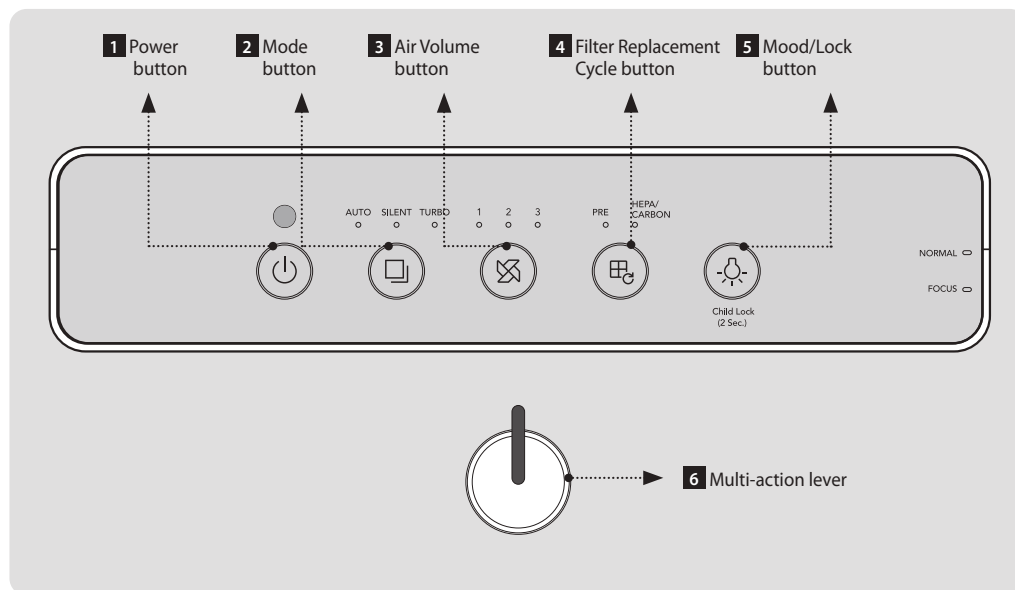**1 Power Button**

Use the button to turn the product on and off.

* When you operate the product for the first time, it is operated in Auto Mode. If you turn off the product during operation and turn it on again, it is operated in the mode active before the product was turned off.

**3 Air Volume Button**

Press the Air Volume button to select the air volume, which is switched in the order of 1 → 2 → 3.

**5 Mood/Lock Button**

Use the button to turn the pollution level indicator and other indicators on and off. While the pollution level indicator and other indicators are turned on, pressing the Mood/Lock button repeatedly executes the following: pollution level indicator OFF → all other indicators OFF → all indicators ON.

* You can lock all the buttons by pressing and holding this button for more than 2 seconds. Press the button again for more than 2 seconds to unlock the buttons.

* If you press this button while the buttons are locked, a sound informs you of the locked status.

**2 Mode Button**

Press the Mode button to switch between Auto → Silent → Turbo Modes.

**4 Filter Replacement Cycle Button**

If the filter alarm indicator is on, clean or replace the filter and press the button for two seconds or longer to reset the replacement cycle.

* If the PRE and HEPA/CARBON lights are turned on at the same time, they reset together.

* If the filter alarm indicator is not turned on, this button does not operate.

* If you have replaced or repaired the filter before the filter alarm indicator was turned on, refer to page 15.

**6 Multi-action lever**

Turn the lever to select the circulation mode. Rotate the lever's indicator 90 degrees forward or upward.

- Turn indicator upward: NORMAL Mode, upward discharge

- Turn indicator forward: FOCUS Mode, forward discharge

HOW TO USE




Tips

- Plug the power cord into an outlet before operating the product.
- When the product is turned on for the first time, it operates in Auto Mode, and afterward, it operates in the previously used mode.


■ How to Operate Product Manually

Press the Power button to turn on the product and press the Air Volume button to select the desired air volume.
(1 → 2 → 3)

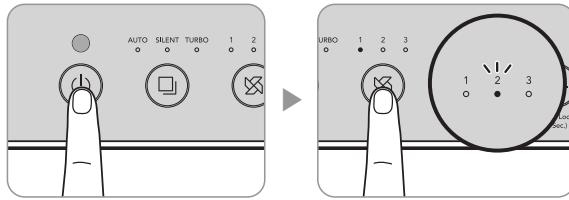


■ How to Use Auto Mode

Press the Power button to turn on the product and press the Mode button to select Auto Mode. (Refer to P. 14)

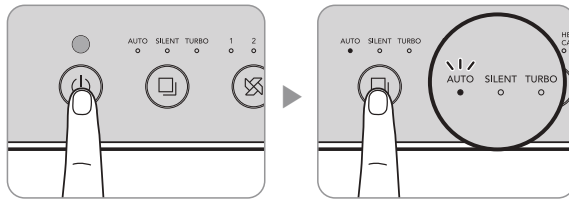


■ How to Use Silent Mode

Press the Power button to turn on the product and press the Mode button to select Silent Mode. This mode minimizes the air volume during operation for a quiet and pleasant environment.

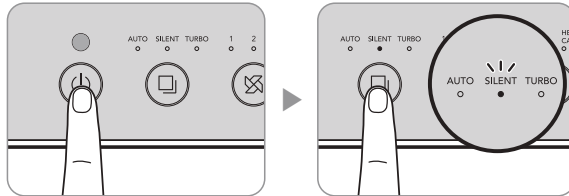

■ How to Use Turbo Mode

Rapidly purifies the indoor air by increasing air volume to the maximum. In Turbo Mode, the device runs more powerfully than when set to the "3" air volume.

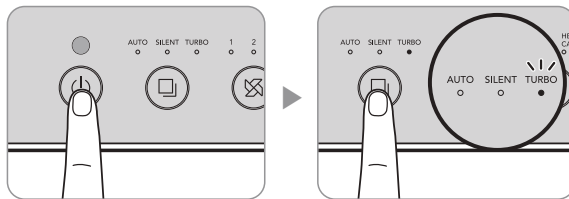

► Auto Mode

The device automatically adjusts the air volume (Low → Medium → Strong) according to the indoor pollution level detected by the sensor to operate efficiently.

This mode is convenient for general users.

	Pollution Level 1	Pollution Levels 2, 3	Pollution Level 4
Air Volume	Auto Level 1	Auto Level 2	Auto Level 3

► Sleep Mode (only works in Auto Mode)

If the room remains dark during Auto Mode operation, the device enters Sleep Mode and runs low air/low noise/power saving operation.


- * The pollution level indicator is turned off during Sleep Mode.
- * When the room becomes bright again, the device re-enters Auto Mode.

Multi-action function

■ NORMAL Mode


In NORMAL Mode, air is discharged from the ventilator at the top of the product. Press the Power button to turn on the product and turn the multi-action lever to select NORMAL Mode.

At this time, the NORMAL mode indicator will light up.

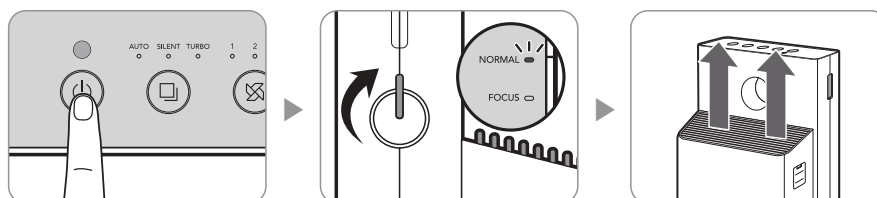

■ FOCUS Mode

In FOCUS Mode, air is discharged through the front grille of the product. Press the Power button to turn on the product and turn the multi-action lever to select FOCUS Mode. At this time, the FOCUS mode indicator will light up.

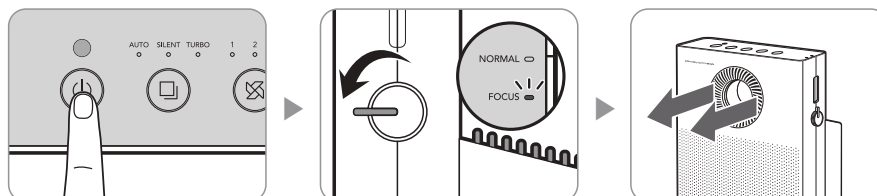

Tips


- The circulation mode indicator does not light up when the multi-action lever is in the middle.
- When turning the multi-action lever, turn it all the way until the circulation mode indicator lights up.
- The multi-action lever turns only up to 90 degrees.

FORCED FILTER RESET MODE


How to Force-reset Filter

Use this function if you have replaced or repaired the filter before the filter alarm indicator was turned on.

1. Press the Filter Replacement Cycle button and the Mood button simultaneously for more than 2 seconds while the product is operating.

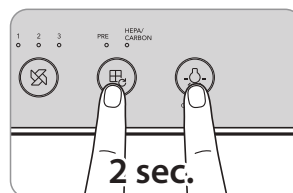


2. The Pre-filter LED flashes at an approximately 0.5 second interval.

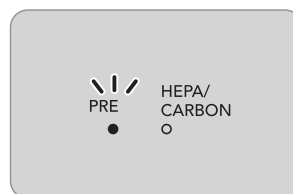


3. Press the Filter Replacement Cycle button to select the desired filter. filters are selected in the following order.

PRE → HEPA / CARBON → PRE & HEPA / CARBON → PRE

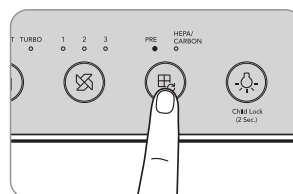

4. After selecting the filter to reset, press the Filter Replacement Cycle button for 2 seconds or longer to reset the filter setting.

* If the Filter Replacement Cycle button is not pressed within 10 seconds or if the Filter Replacement Cycle button and the Mood button are pressed simultaneously for longer than 2 seconds, the mode is canceled.

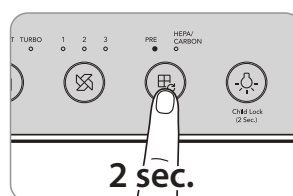


ADJUST PARTICLE SENSOR


How to adjust the sensitivity of the particle sensor

When you operate the product for the first time, the pollution sensor is set at the standard sensitivity. If the pollution level indicator remains at High after the air purifier operates for more than two hours where the pollution level is high, or if the pollution level indicator remains at Clean for more than one hour where the pollution level is high, you can adjust the sensor's sensitivity as follows.

1. Press the Mode button and the Air Volume button simultaneously for longer than 2 seconds while the product is operating.

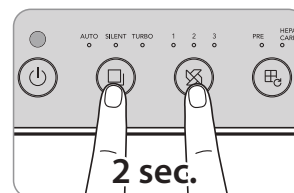


2. The air volume mode indicator flashes at an approximately 0.5 second interval.

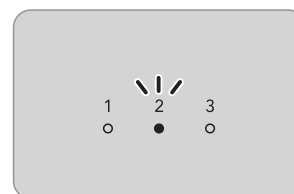


3. Press the Air Volume button to adjust sensitivity of the sensor. When the sensor's sensitivity is selected, the air volume mode indicator flashes as shown below.

Level 1	Level 2	Level 3
High	Standard	Low

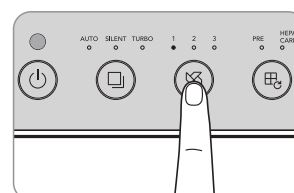

4. If you press the Air Volume button and the Mode button at the same time for longer than 2 seconds, the selected sensor sensitivity is entered and the product operates normally.

* The selected sensitivity of the sensor is automatically entered if the Air Volume button and the Mode button are not pressed for 10 seconds.

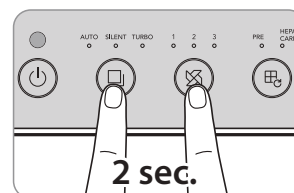

HOW TO CLEAN





Tips

- Always unplug the power cord before cleaning.
- Do not use organic solvents (thinner, etc.), bleach, or detergents containing chlorine or abrasives to clean the product.
- Do not immerse the product in water or spray water on it.


■ How to Clean Pollution Sensor (every two months)

1. Open the pollution sensor cover on the left side of the product. Clean the air inlet, outlet, and the pollution sensor area with a soft brush or a vacuum cleaner first.

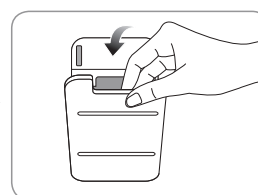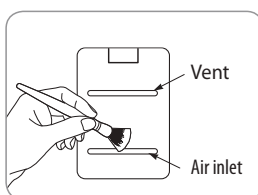

2. Wipe the lens and the dust inlet and outlet with a moistened cotton swab, and wipe them again with a dry swab to remove moisture.


- * Failure to clean regularly may result in reduced performance of the pollution sensor.
- * Clean the sensor more frequently in a dusty environment because the cleaning cycle varies depending on the operating environment.

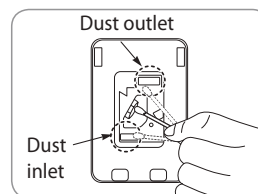

■ How to Clean Air Inlet and Outlet (every two months)

Clean the air inlet and outlet with a soft brush.


- * Take care not to allow dust to fall inside the product when cleaning.

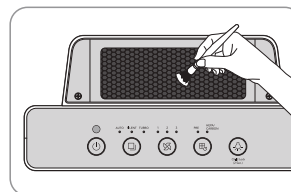

■ How to Clean Front Cover

Remove the front cover from the product and remove dust from the surface of the cover with a soft, dry cloth or a soft brush.


- * If the degree of pollution is severe, use a slightly wet cloth to wipe it. (Do not use an abrasive.)

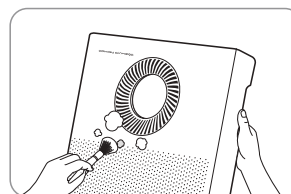

■ How to Clean Main Body of Product (every two to four weeks)

Use a dry and soft cloth to wipe it.

- * If the degree of pollution is severe, use a slightly wet cloth to wipe it. (Do not use an abrasive.)

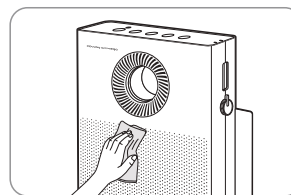




Tips


- Always unplug the power cord before cleaning the filter.
- The Pre-filter can be restored by removing dust or washing with water.
- Failure to clean the Pre-filter for a long time may result in poor product performance.
- The Customized filter(Optional) , Deodorization filter and GreenHEPA™ filter cannot be restored by cleaning.
Never wash these filters with water.

■ Pre-filter (every two to four weeks)


1. Pull the top part of the front cover to open it.

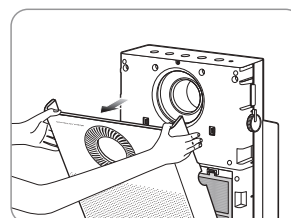

2. Press the Pre-filter knob and take the filter out.

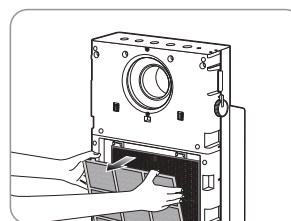



3. Remove dust with a vacuum cleaner or water depending on the degree of pollution.

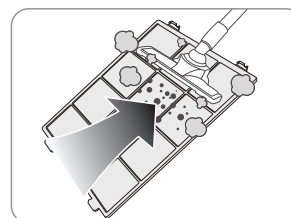

4. Dry the Pre-filter completely and install it on the product.

Re-attach the front cover on the product.

- * When attaching the Pre-filter on the product, insert it correctly into the hook.
- * Wash the Pre-filter in running water or wash it in water with a neutral detergent (approx. 30°C) and dry it thoroughly in well-ventilated shade. If you dry it in direct sunlight or near a dryer, heater, or other heat-generating appliance, the Pre-filter may be deformed and the product may not function properly.

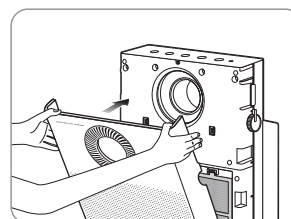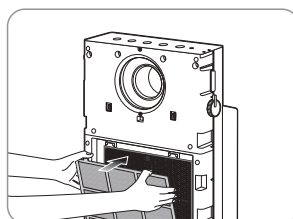

HOW TO REPLACE FILTER

■ How to Replace

- Refer to the filter installation method on page 10 to replace the filter.
- Be sure to check the front side when installing the filter.
- Use genuine Coway filter to maintain optimal performance of the product.
- Always unplug the power cord before replacing the filter.

■ Filter Cleaning and Replacement Cycle

Filter	Cleaning/Replacement Time	Cleaning/Replacement
Ultrafine Pre-filter	When the "PRE" indicator is lit*	Clean and wash
Customized filter(Optional)	Once / 4 months	Replace
Deodorization / GreenHEPA™ filter	When "HEPA / CARBON" indicator is lit**	Replace


* If you operate the device for 8 hours everyday at the maximum air volume, it will light up after about 2 weeks of use.

** If you operate the device for 8 hours everyday at the maximum air volume, it will light up after about one year of use.
The timing of when the filter cleaning/replacement alarm indicator lights up varies depending on the use and environment.


- After cleaning or replacing the filter, be sure to press the Filter Replacement Cycle button to reset the cycle (P.15).
- The filter replacement cycle is the recommended cycle and may vary depending on usage environment.

■ How to Replace Customized filter(Optional)

1. Open the front cover, remove the ultrafine Pre-filter from the product, and remove the Customized filter(Optional) from the ultrafine Pre-filter.

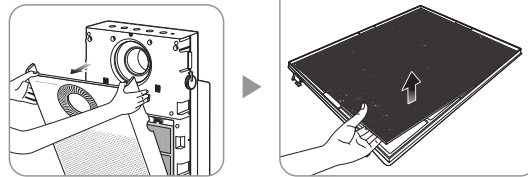


2. Remove the packaging vinyl from the new Customized filter(Optional) and insert it into the back of the ultrafine Pre-filter. Reassemble the ultrafine Pre-filter, insert it into the device in the reverse order, and then close the front cover.

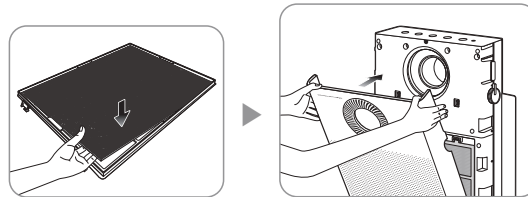

■ How to Replace Deodorization / GreenHEPA™ filter (when filter alarm indicator is on)


1. Open the front cover, remove the Pre-filter from the product, and remove the Deodorization / GreenHEPA™ filter

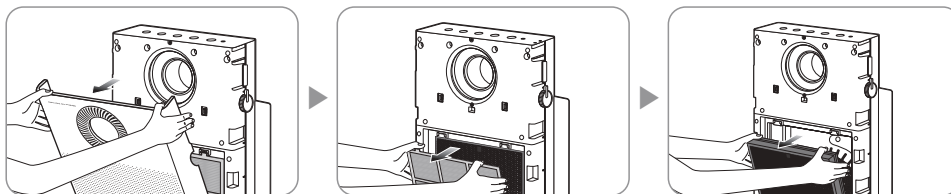

2. Remove the packaging vinyl from the new Deodorization / GreenHEPA™ filter, and replace the old one with it. Reassemble the Pre-filter, insert it into the device in the reverse order, and close the side cover.

* Check the front display of the filter.

* When assembling the Pre-filter, press the hooks on both sides completely.

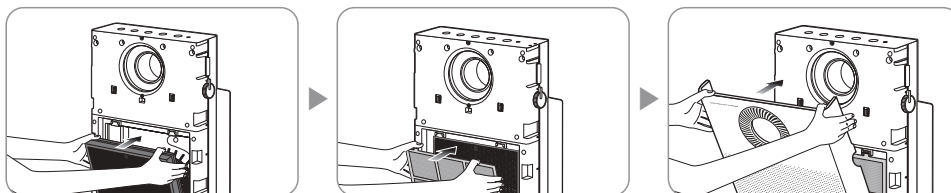

TROUBLE SHOOTING

Even when the product is not broken, the air purifier may malfunction due to misuse by the user or other minor causes. Check the following in such a circumstance to resolve the issue easily without assistance from the service center. If the problem persists after checking the items below, please contact the service center.

Symptom	Check	Measures to take
No air is coming out.	• Is the power cord plugged in?	Plug the power cord into a 220 V- 240 V~ 50 Hz, 60 Hz outlet.
	• Are all the indicators off?	Press the Power button and select the desired function.
	• Is there a power outage?	Use the product after the electricity is restored.
The air volume does not change.	• Is the Auto Mode indicator on?	Air volume selection is available only in Manual Mode (normal).
	• Is the SILENT / TURBO Mode indicator on?	Air volume is not selected in Silent / Turbo modes, but rather runs at a set level.
The air volume has weakened considerably.	• Has the filter cleaning or replacement time passed?	Check the filter cleaning and replacement cycle and clean or replace the filter.
The pollution level does not change.	• Is there dirt on the pollution sensor lens?	Clean the pollution sensor lens. (Refer to P. 17.)
	• Does the pollution level remain at High?	Adjust the pollution sensor's sensitivity to Low or Standard. (Refer to P. 16.)
	• Does the pollution level remain at Low?	Adjust the pollution sensor's sensitivity to High or Standard. (Refer to P. 16.)
There is a bad smell coming out of the ventilator.	• Has the filter cleaning or replacement time passed?	Check the filter cleaning and replacement cycle and clean or replace the filter.
The pollution level indicator is flashing.	• Contact the service center.	
Other functional defects	• Check the problem, unplug the power cord, and contact the service center.	

SPECIFICATION

Product Name	Air Purifier
Model Name	AP-1220B
Rated Voltage	220 V - 240 V~ 50 Hz, 60 Hz
Phase	Single phase
Power Consumption	50 W
Product Insulation Class	Class 2 equipment <input type="checkbox"/>
Dust Collection Method	Mechanical dust collection (HEPA filter)
Safety Device	Power cut off upon opening/closing of the door
Installation Location	For indoor use
Maximum air volume	6.0 m ³ / min
Product Size	376 mm (width) × 196 mm (length) × 717 mm (height)
Product Weight	8.7 kg

- ▶ There may be slight changes to the specifications for improving the product's performance.
- ▶ The recommended use area and the maximum air volume are results of measurement in Turbo Mode in the Normal circulation mode.

**WARRANTY CARD OR WARRANTY LETTER
TWO YEAR LIMITED WARRANTY
AIR PURIFIER AP-1220B("PRODUCT")**

Model:

Serial Number:

Customer Name:

Date of Purchase:

(“OWNER”)

What This Warranty Covers:

Commencing with the date of purchase of the Product and continuing for a period of Two years, if manufacturing defects in the Product cause the Product to not operate properly for its intended use, then subject to the exclusions, conditions, and limitations contained herein, COWAY at its sole option will repair or replace the Product. Decisions as to the extent of repair or replacement required will be made solely by COWAY. The remedy under this Warranty is available only for that portion of the Product exhibiting defects at the time of the warranty claim. The replacement Product as well as any remaining original Product will be warranted only for the original two years warranty period. This limited warranty applies only to Product used for an application specified by COWAY for the Product and applied in strict accordance with COWAY published specifications in effect at the time of application. IF PRODUCT IS USED FOR OTHER THAN ITS INTENDED PURPOSE, IT IS SOLD AS IS AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

What This Warranty Does Not Cover:

This Warranty warrants that the Product will be free from manufacturing defects which affect the ability of the Product to operate for its intended use; it is not a warranty that the Product will never require repairs or to undertake responsibilities, liabilities or obligations other than those specifically identified in the preceding section. COWAY is not responsible or liable for personal injury or property damage of any kind, even if arising from a breach of this Warranty.

Limitations and Exclusions:

TO THE EXTENT PERMITTED BY APPLICABLE LAW, COWAY DISCLAIMS ANY OTHER WARRANTY EXPRESS OR IMPLIED, THAN THAT PROVIDED FOR HEREIN. THIS WARRANTY IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, GUARANTEES, CONDITIONS AND REPRESENTATIONS, EXPRESS OR IMPLIED, ORAL OR WRITTEN, STATUTORY OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY IMPLIED CONDITIONS OR WARRANTIES AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE COWAY PRODUCT.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

COWAY DOES NOT AUTHORIZE ANY PERSON INCLUDING ITS REPRESENTATIVES, TO MAKE ANY REPRESENTATION OR TO OFFER ANY WARRANTY, CONDITION OR GUARANTY IN RESPECT OF THE PRODUCT OTHER THAN THIS WARRANTY. THIS LIMITED WARRANTY SHALL BE THE OWNER'S SOLE AND EXCLUSIVE REMEDY AGAINST COWAY AND COWAY SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL, EXEMPLARY, SPECIAL, INCIDENTAL OR OTHER DAMAGES INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS, AND LOSS OF USE. INCIDENTAL, CONSEQUENTIAL AND EXEMPLARY DAMAGES SHALL NOT BE RECOVERABLE EVEN IF THE REMEDIES OR THE ACTIONS PROVIDED FOR IN THIS WARRANTY FAIL OF THEIR ESSENTIAL PURPOSE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. COWAY SHALL NOT BE LIABLE FOR ANY DAMAGES WHICH ARE BASED UPON NEGLIGENCE, BREACH OF WARRANTY, STRICT LIABILITY OR ANY OTHER LEGAL THEORY OF LIABILITY OTHER THAN THE EXCLUSIVE LIABILITY SET FORTH IN THIS WARRANTY.

Limitations on Implied Warranties:

Any implied warranty of merchantability or fitness for a particular purpose or use, shall be limited to the duration of the foregoing express written warranty.

Conditions of Warranty:

COWAY's continuing liability under this Warranty is conditioned upon the following:

- a) The defect or damage is not caused by or is the result of: abnormal use or conditions; improper storage, unauthorized modifications or repair; misuse, neglect, accident, alteration, improper installation or other acts that are not the fault of Coway or the manufacturer of the product or that are not covered by the manufacturer's warranty;
- b) The Product has not been altered, modified or repaired without prior written approval of COWAY;
- c) The OWNER has notified COWAY in writing of any failure of the Product covered by this Warranty within thirty (30) days following such failure;
- d) There has been no misuse, abuse or negligence with respect to the Product on the part of the OWNER.

Waiver:

COWAY's failure at any time to enforce or rely upon any of the terms or conditions stated herein shall not be construed to be a waiver of its rights hereunder.

Obtaining Warranty Service and OWNER'S Duties:

If the Product fails to operate for its intended purpose, then notify COWAY or its Representative Agency, within 48 hours or within the next business day after discovery of any defect in the Product. The OWNER must give written notice to COWAY no later than thirty (30) days after a defect is discovered or should by reasonable diligence have been discovered. Claims under this Warranty will require proof of purchase by the OWNER.

GERMANY & AUSTRIA

Add : KÜNZI Deutschland, Zweigniederlassung der KÜNZI S.p.A. Orber Straße 67, DE-60386 Frankfurt am Main
Tel. : +49 (0)69 66 10 27 000
Mail : info-de@kunzigroup.com
Web : <https://kunzigroup.com>

POLAND

Add : OPUS SP. z o.o.
Toruńska 8, 44-122 Gliwice
Tel. : +32 4201255
Mail : serwis@opus.pl

SWEDEN

Add : Albion Nordic AB Traktorgatan 2 745 37
Enköping Sweden
Tel. : +46 171 66 33 00
Mail : info@albionnordic.com
Web : www.albionnordic.com

TURKEY

Add : HAKMAN ELEKTRONIK SAN. VE TIC. A.Ş.
Dikilitaş mahallesi Emirhan Cad. Barbaros Plaza İş Merkezi No:113 K.5 Beşiktaş / İSTANBUL
Tel. : +90 212 217 11 60
Mail : info@hakman.com.tr
Web : <https://www.hakman.com.tr>

COWAY

Add : Coway Co., Ltd. 136-23, Yugumagoksa-ro, Yugu-eup,
Gongju-si, Chungcheongnam-do, Korea
Tel. : +82-1588-5100

ITALY

Add : KÜNZI S.p.A, Via L. Ariosto n.19, 20091 – Bresso (MI),
Italy
Tel. : +39 02 61 45 161
Mail : info-it@kunzigroup.com
Web : <https://kunzigroup.com>